

Refrigeration
Absorption Refrigerators
N3000 / N4000 Series

DOOR SWING KIT N3000/N4000

 
Spare part numbers

 
691880 (N3080-N4080) 691881 (Flat doors E/E+ controls) 691182 (Flat doors Automatic controls) 691183 (Curved doors E/E+ controls) 691184 (Curved doors Automatic controls)

Content

- 1. Control panel right
- 2. Sticker
- 3. Screws
- 4. Screw caps
- 5. Center hinge right
- 6. Bottom latch left










Remove the control panel

 NOTE: keep the control panel for model N3080



NOTE: some models have 2 doors





691095 / 1123-V03 1/4



Interchange the hinge parts on the door(s) of the refrigerator

NOTE: some models have 2 doors



Remove the displayboard by pushing the white knobs together



Remove the technical panel from the mounting box.

NOTE: This is only applicable for models with 1 door. Models with 2 doors do not have a mounting box



Remove the communication cable through the mounting box.



Remove the mounting box



691095/ 1123-V03 2/4



Turn the mounting box 180 degrees.



Place back the communication cable and technical panel in reverse order.



Interchange the hinge parts on the cabinet of the refrigerator (A parts to A, B parts to B).



Remove the bottom latch from the right side and place the bottom latch left (#6) on the left side.

NOTE: only some models have a bottom latch (#6)



N Move the strike plate to the other side

NOTE: only models with 2 doors have 2 strike plates

 


691095/ 1123-V03 3/4



Remove the center hinge and put the center hinge right (#5) in position

NOTE: only models with 2 doors have a center hinge






Put the mounting box back in position

NOTE: models with 2 doors do not have a mounting box



Put the door(s) back in position

NOTE: some models have 2 doors

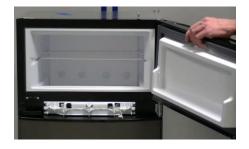

Put the control panel right (#1) in position

NOTE: for model N3080 put the old control panel back in position





S Put the sticker in position



691095/ 1123-V03 4/4